CAMPOMATIC

FR770M

Refrigerator

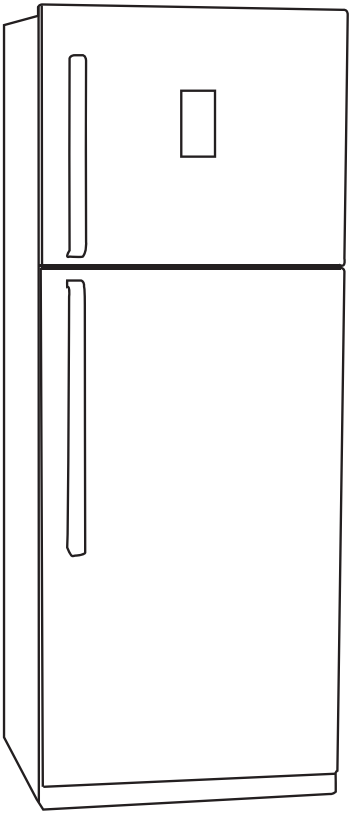

Made in China

INSTRUCTION MANUAL

Caution: *Read and follow all safety and operating instruction before first use of this product.*

Campomatic S.R.L. Via Configliachi 5/B . 35031, Abano Terme (Padova), ITALIA
WWW.CAMPOMATIC.COM

CONTENTS

- Safety warnings
  - Meaning of safety warning symbols 2
  - Related warnings for use 2
  - Electricity related warnings 2
  - Warnings related to placing items 3
  - Warnings related to disposal 3
- Proper use of refrigerators
  - Names of components 4
  - Machine 5
  - Illuminating lamp and replacement 5
  - placement 5
  - Start 5
- Introduction of Your Refrigerator's Functions
  - Introduction of Your Refrigerator's Functions 6
- Maintenance of refrigerators
  - Cleaning 8
  - Ice Machine Cleaning 8
  - Defrost 8
  - Stop using 8
  - Install The Door Handle 9
- Frequently asked questions
  - Frequently asked questions 10

DEAR CUSTOMER:

Thank you for buying this refrigerator-freezer . To ensure that you get the best results from your new refrigerator-freezer, please take time to read through the simple instructions in this booklet.
Please ensure that the packing material is disposed of in accordance with the current environmental requirements.
When disposing of any refrigerator-freezer equipment please contact your local waste disposal department for advice on safe disposal.
This appliance must be only used for its intended purpose.

Safety warnings

▶ Meaning of safety warning symbols

Prohibition symbols	The symbols indicate prohibited matters, and those behaviors are forbidden. Non-compliance with the instructions may result in product damages or endanger the personal safety of users.
Warning symbols	The symbols indicate matters that must be followed, and those behaviors must be strictly executed in line with the operation requirements. Non-compliance with the instructions may result in product damages or endanger the personal safety of users.
Note symbols	The symbols indicate matters to pay attention to, and these behaviors shall be specially noted. Due precautions are needed or minor or moderate injuries or damages of the product will be caused.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This manual contains lots of important safety information which shall be observed by the users.

Safety warnings

▶ Electricity related warnings

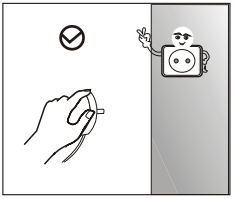

- Do not pull the power cord when pulling the power plug of the refrigerator. Please firmly grasp the plug and pull out it from the socket directly.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

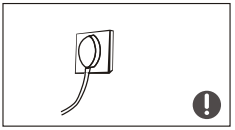

- Please use a dedicated power socket and the power socket shall not be shared with other electrical appliances.
- The power cord should be firmly contacted with the socket or else fires might be caused. Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.

- Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases. Do not unplug the refrigerator and other electrical appliances considering that spark may cause a fire.

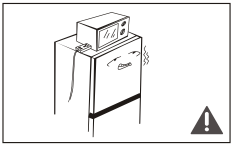

- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

▶ Related warnings for use

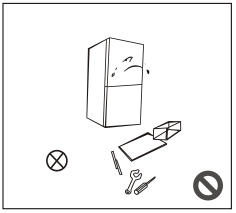

- Do not damage the refrigerant circuit.
- Damaged power cord must be replaced by the manufacturer , its maintenance department or related professionals in order to avoid danger.

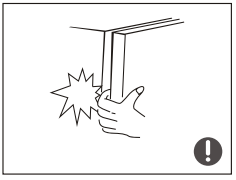

- The surrounding of the appliances around or the embedded structure shall not be obstructed while good ventilation shall be maintained.
- The gaps between refrigerator doors and between doors and refrigerator body are small, be noted not to put your hand in these areas to prevent squeezing the finger. Please be gentle when switching off the refrigerator door to avoid falling articles.
- Do not pick foods or containers in the freezing chamber when the refrigerator is running, especially metal containers in order to avoid frostbite.

Safety warnings

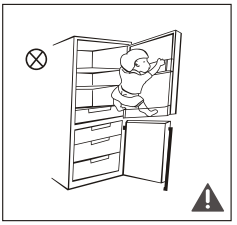

- Do not allow children to enter or climb the refrigerator to prevent that children are sealed in the refrigerator or children are injured by the falling refrigerator.
- Do not spray or wash the refrigerator; do not put the refrigerator in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the refrigerator.

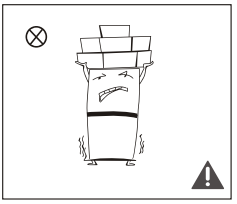

- Do not place heavy objects on the top of the refrigerator considering that objectives may fall when switching the door, and accidental injuries might be caused.
- Please pull of the plug in case of power failure or cleaning. Do not connect the freezer to power supply within five minutes to prevent damages to the compressor due to successive starts.

Warnings related to placing items

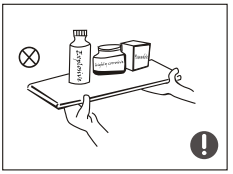

- Do not put flammable, explosive, volatile and highly corrosive items in the refrigerator to prevent damages to the product or fire accidents.
- Do not place flammable items near the refrigerator to avoid fires.

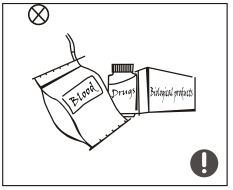

- This appliance is intended to be used in household and similar applications such as
  -staff kitchen areas in shops,offices and other working environments;
  -farm houses and by clients in hotels,motels and other residential type environments;
  -bed and breakfast type environments;
  -catering and similar non-retail applications.

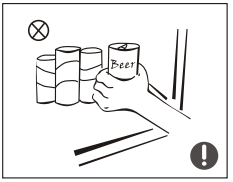

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Warnings related to disposal

Please abandon the refrigerator-freezer according to local regulators for it use flamm able blowing gas and refrigerant.

Please according to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas. Before you scrap the appliance, please take off the doors to prevent children trapped.

Proper use of refrigerators

Names of components

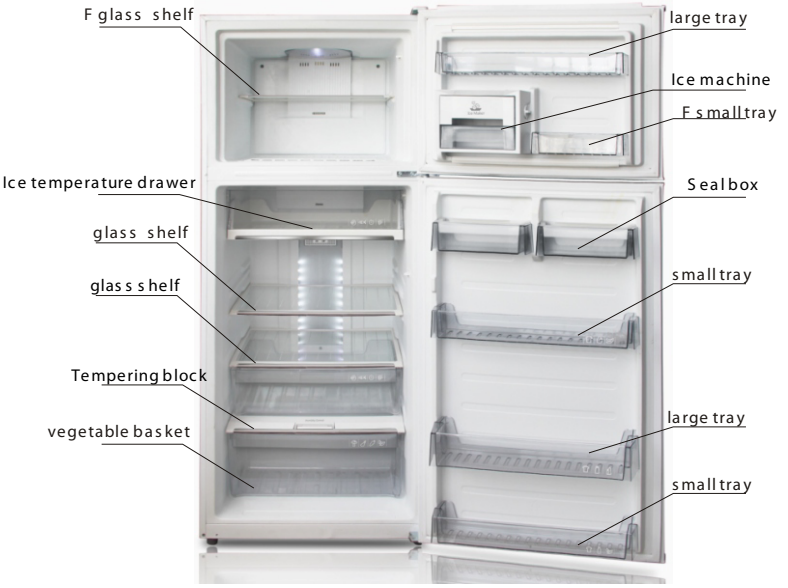

Refrigerating chamber

- The freezer chamber is suitable for storage of a variety of fruits, vegetables, beverages and other food consumped in the short term.
- Cooking foods shall not be put in the refrigerating chamber until cooled to room temperature.
- Foods are recommended to be sealed up before putting into the refrigerator.
- The glass shelves can be adjusted up or down for a reasonable amount of storage space and easy use.

Freezing chamber

- The low temperature freezing chamber may keep food fresh for a long time and it is mainly used to store frozen foods and making ice.
- The freezing chamber is suitable for storage of meat, fish, rice balls and other foods not to be consumed in short term.
- Chunks of meat are preferably to be divided into small pieces for easy access. Please be noted food shall be consumed within the shelf time.
- The temperature should be set to "quick-freeze", when you want to refrigerate foods quickly.

Chill compartment

- It can meet your diversified storage demand. And, it is suitable to store fresh and cold foods for short time. It is unnecessary to thaw these foods, and it can lock nutrition and keep good mouthfeel! Meanwhile, it can adjust the temperature state of ice green house by adjusting the size of air gap of ice green house based on different food needs.
- Rapid cooling of beer, drinks can

The features and accessories of the refrigerator you bought may be not entirely consistent with the legend, please refer to the Material object

Proper use of refrigerators

Ice Machine

Fig.1

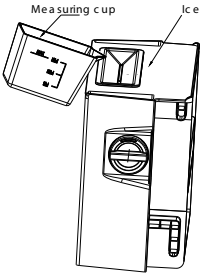

Fig.2

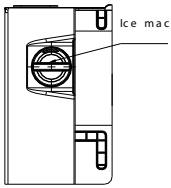

1) Drinking water is filled in a measuring cup firstly. The maximum amount of water is up to the mark "MAX";
2) Cold water in the measuring cup is added into the ice machine according to the method shown in Fig.1. Ice blocks will be formed several hours later after the door of the freezing chamber is closed.
3) Turning clockwise knob on the ice machine 110° can make separation of ice block with ice box.

⚠ Please close the door gently in order to avoid water spilling from the ice machine.

Illuminating lamp and replacement

Lamp replacement by professionals

Placement

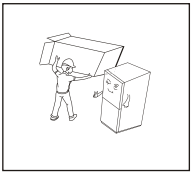

- Before using the refrigerator, remove all packaging materials including bottom cushions and foam pads and tapes inside the refrigerator, tear off the protective film on the door and the refrigerator body.

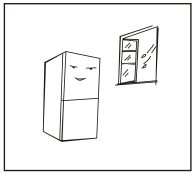

- The refrigerator is placed in a well-ventilated indoor place; the ground shall be flat, and sturdy (rotate left or right to adjust the wheel for leveling if unstable).

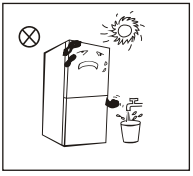

- Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.

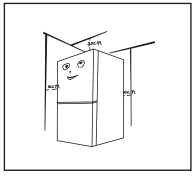

- The top space of the refrigerator shall be greater than 30cm, and The refrigerator should be placed against a wall with a free distance more than 5cm and not exceeding 7.5mm to facilitate the opening and closing and heat dissipation.
- Wipe the refrigerator inside and outside with warm moist rag (add a small amount of Neutral detergent in the warm water and wipe clean finally with clean water).

Start

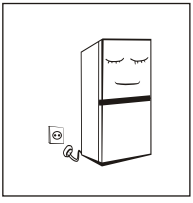

- The refrigerator shall stay for half an hour before connecting power when it is firstly started.
- The refrigerator shall run 2 to 3 hours before loading fresh or frozen foods; the refrigerator shall run for more than 4 hours in summer in advance considering that the ambient temperature is high.

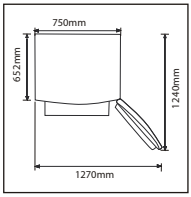

- Please leave enough space to ensure feasible opening and drawer removal.
- Dimensions shown are for reference only.

Introduction of Your Refrigerator's Functions

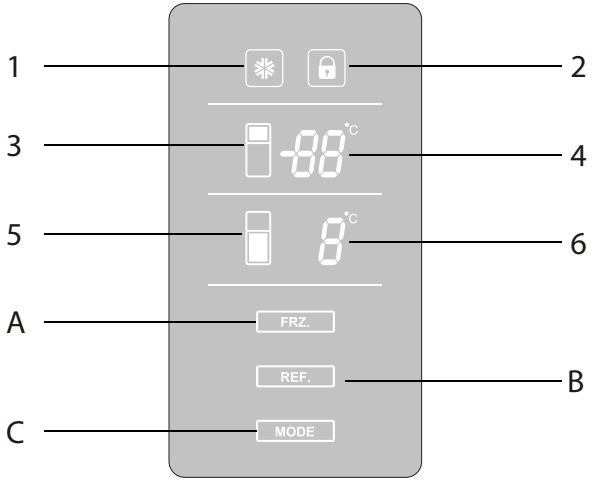

1. Control buttons
A.F Temperature control FRZ.
B.R Temperature control REF.
C.Function buttons(Lock/Quick-freezing) MODE

2. Led display
①Quick-freezing icon ②Lock icon ③F temperature zone icon ④ F temperature display
⑤R temperature zone icon ⑥ R temperature display

3. Locking and unlocking
Under unlocked status, push down C key for three seconds enter into lock status and it displays icon . 🔒

Under locked status, push down C key for three seconds to unlock and the icon disappears . 🔓

Below functions shall be carried out under unlocked status.

4. Quick-freezing mode
Short press function key C to enter quit/quick-frozen mode and light up icon . ❄ The refrigerator will operate through setting mode after lock.

5. R's temperature setting
Press R temperature button B. The temperature can be set when R's temperature is shown twinkling with range of 2℃~8℃. The R will operate in accordance with settings. The temperature shall be adjusted to: 8 ℃→7℃→⋯→2℃→⋯→7℃→8℃.

6. F temperature setting
Press F temperature button A, The temperature can be set when F's temperature is shown twinkling with range of -16 ℃~-24 ℃. The F will operate in accordance with settings. The temperature shall be adjusted to:-16 ℃→-17 ℃→⋯→-24 ℃→⋯→ -16 ℃.
Note: If quick-frozen mode is set when the F's temperature is changed, the related modes shall be quitted /cancelled immediately.

7. Outage memory
When outage occurs, the instantaneous working state will be locked. The working state can be preserved until power is on.

8. Open prompts and open alert control
When the refrigerator or refrigerating room's door opens, an open music tune will be played. If the door hasn't been closed after 120 seconds, the buzzer will give alarm and after that, 1 alarm per second until the door is closed. Press button to cancel buzzing.

9. Fault indication
When following prompts appear on display screen, it indicates malfunction in refrigerator. The refrigerator can still refrigerate under some malfunctions, yet user shall contact maintenance for refrigerator's optimized operation.

Display	E1	E2	E5
Malfunction	Refrigerator temperature sensor circuit	Freezer room temperature sensor circuit	Freezer defrost sensor
Display	E6	E7	
Malfunction	Communication circuit	Ambient temperature sensor	

Maintenance of refrigerators

Cleaning

- Dusts behind the refrigerator and on the ground shall be timely cleaned to improve the cooling effect and energy saving. The interior of the refrigerator should be cleaned regularly to avoid odor. Soft towels or sponge dipped in water and non-corrosive neutral detergents are suggested for cleaning. The freezer of shall be finally cleaned with clean water and dry cloth. Open the door for natural drying before the power is turned on.

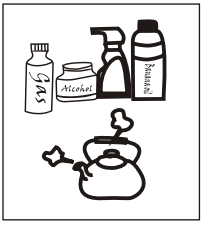

- Do not use hard brushes, clean steel balls, wire brushes, abrasives, such as toothpastes, organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items clean refrigerator considering that this may damage the fridge surface and interior .
- Do not rinse with water so as not to affect the electrical insulation properties.

⚠ Please unplug the refrigerator for defrost and cleaning.

The cleanness of the ice machine

- Disassembly of the ice machine : The ice machine is hung in the door by means of two suspension loops on the side. So, it can be removed from the door integrally, as shown in the below figure:

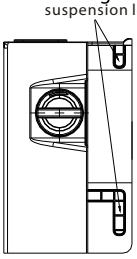

- Cleanness of the ice machine : Water-guiding gutter on the top of the ice machine can be removed directly for cleaning. Ice tray can be drawn with icetray rack. Ice storage box can also be drawn singly for cleaning. See below figure:

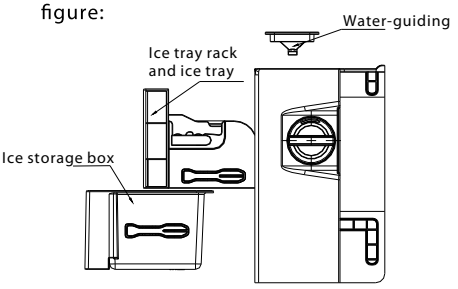

Defrost

- Auto-defrost for Frost-free Refrigerator

Stop using

Foods can be preserved for a couple of hours even in summer in case of power failure; it is recommended to reduce the frequency of opening door and do not put fresh foods into the freezer.

Please unplug the refrigerator left unused for a long time for cleaning. Keep the door open to avoid the bad odor.

Before moving the refrigerator, please emove all items in the refrigerator and fasten the glass partitions, fruit and vegetable boxes, freezer drawers with taps lest the door opens during displacement; Do not turn upside, horizontally place or vibrate the refrigerator, the carrying angle can not be greater than 45 ℃.

⚠ Continuous operation is recommended when the refrigerator is started. Please do not move the refrigerator under normal circumstances so as not to affect the refrigerator's service life.

INSTALL THE DOOR HANDLE

Note: Figures in the user manual are only for reference. The actual product may differ slightly.
The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory.

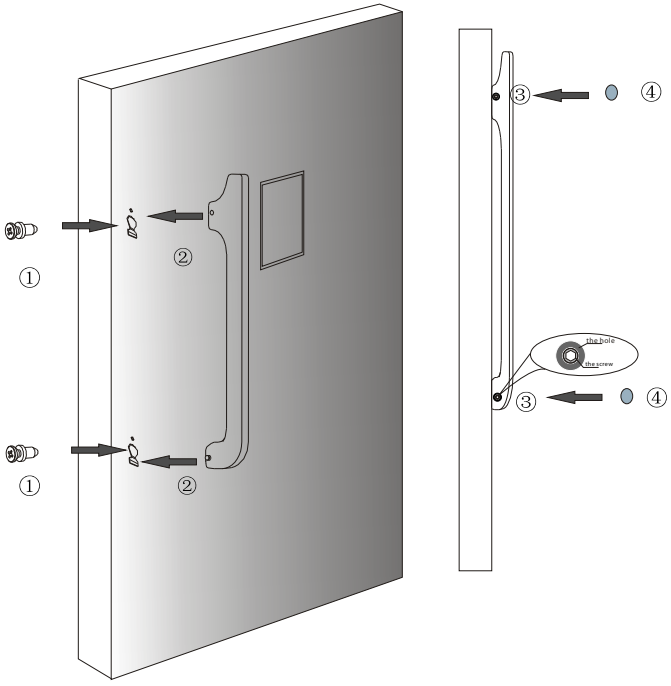

①take out the two crisscross-screw;and install them into the door holes; turn the screws till to the bottom;

②aim at screws to install the handle;

③the screws in the hole at the side of the handle and turn the screws till them very tight;

④Screw cap should be put on the screw .

Frequently asked questions

▶ The following simple issues can be handled by the user. Please call the after-sale service department if the issues are not settled.

Inoperation	Whether the freezer is plugged and connected to power; Low voltage; Failure power or tripping circuit
Odor	Odorous foods should closely wrapped; Whether foods are rotten; Whether the interior shall be cleaned.
Long-term operation of compressor	It is normal that refrigerator operates for longer time in summer when the ambient temperature is higher; Do not put too much food in the freezer at one time; Do not put foods until they are cooled; Frequent opening of refrigerator door.
Illuminating light does not shine	Whether the refrigerator is connected to power, whether the illuminating light is damaged.
The refrigerator door can not be properly closed.	The freezer door is stuck by food packages; Too much food; Tilt refrigerator.
Loud noises	Whether the food is leveled, whether the refrigerator is balanced; Whether the refrigerator parts are properly placed.

Warm tips:
◆The refrigerator enclosure may emit heat during operation specially in summer, this is caused by the radiation of the condenser, and it is a normal phenomenon.
◆Condensation: condensation phenomenon will be detected on the exterior surface and door seals of the freezer when the ambient humidity is large, this is a normal phenomenon, and the condensation can be wiped away with a dry towel.
◆Buzz: Buzz will be generated by running compressor specially when starting up or shutting down.

TECHNICAL DATA

Model	FR770M
Net weight(kg)	89
Rated Power(W)	99
Temperature rise value(min)	/
Overall space required for product (mm)	750*735*1825
Overall space required for use(mm)	/

WARNNING

Caution:risk of fire

RECOMMENDATIONS：
1) WARNING Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
2) WARNING Do not damage the refrigerant circuit.
3) WARNING Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
4) The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.
5) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6) Children should be supervised to ensure that they do not play with the appliance.
7) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8) Please abandon the refrigerator-freezer according to local regulators for it use flammable blowing gas and refrigerant.
9）Please according to local regulations regarding disposal of the appliance for its flammable refrigerant and blowing gas. Before you scrap the appliance, please take off the doors to prevent children trapped.

Correct Disposal of this product：
This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.